


IMPACT ACOUSTIC®

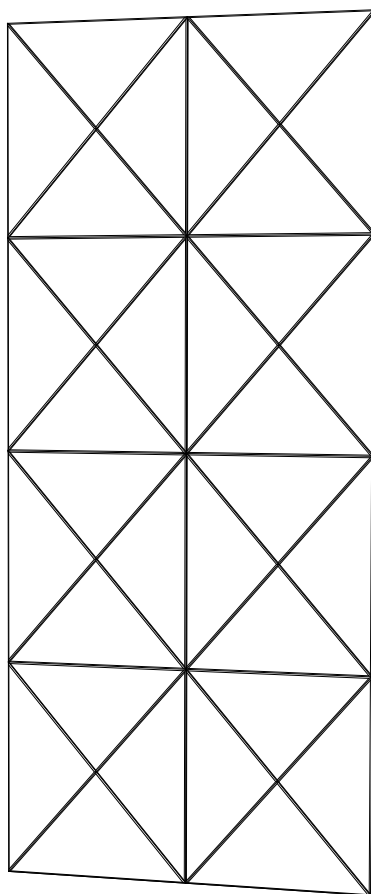

Kingscross

Wall Covering


ASSEMBLY INSTRUCTIONS

Kingscross

Wall Covering


1

For mounting the wall panels, we recommend our spray contact glue. For this purpose, the glue is applied cross-wise at a distance of approx. 200mm, for example on the wall vertically and directly on the panel horizontally. A slightly visible film of adhesive is sufficient.

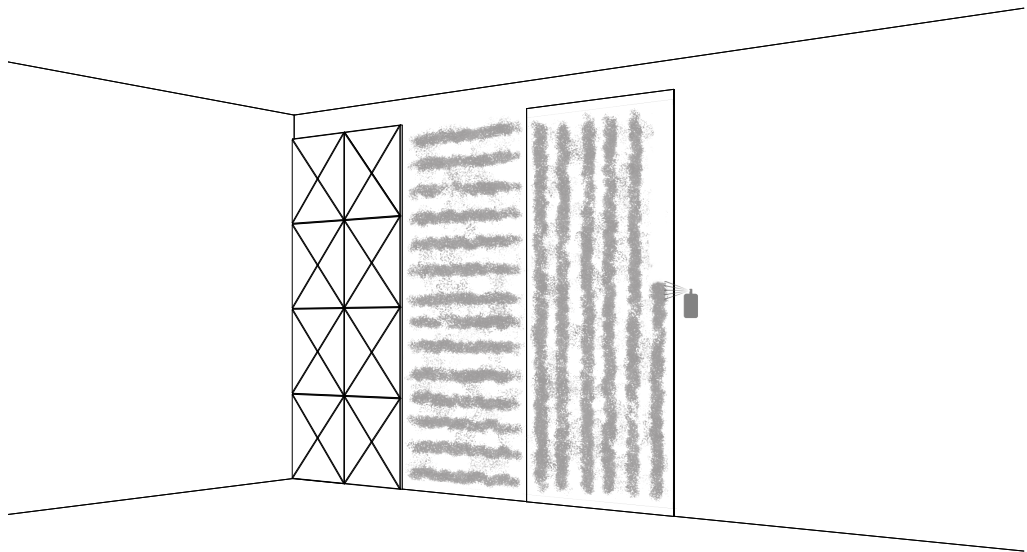

2

After alignment of the wall element, the entire surface must be pressed simultaneously for a few seconds.

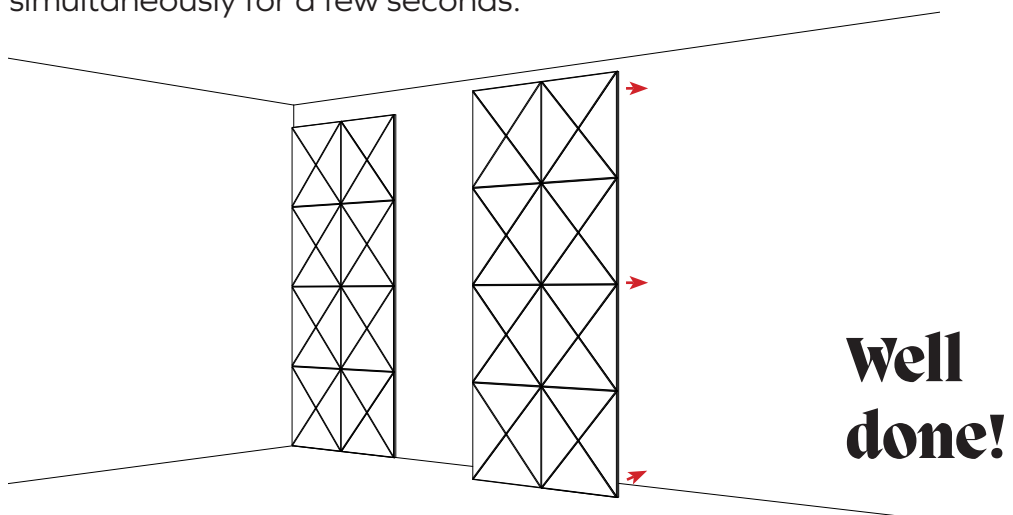

Note

Wall panels with V-Cuts can be easily attached together and shortened without the joint becoming visible.