
IMPACT ACOUSTIC®

assembly instructions

STORMBOARD Accessories

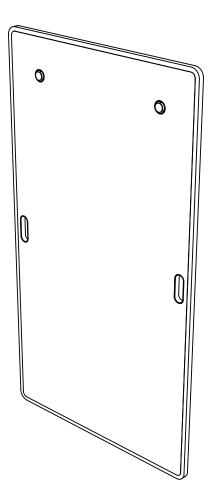

StormBoard

assembly instructions

1.

Screw the wall brackets (A) to the wall (positions shown in the dimensioned drawing). Put the spacer rings (B) over the wall brackets (A). Screw the covers (C) onto the wall brackets (A).

2. Glue the spacers (D) to the wall, the positions are shown in the dimensional drawing.

