


IMPACT ACOUSTIC®




Assembly Instructions
Bysso

Dimensional Drawing

Bysson 723.24.20.000.00

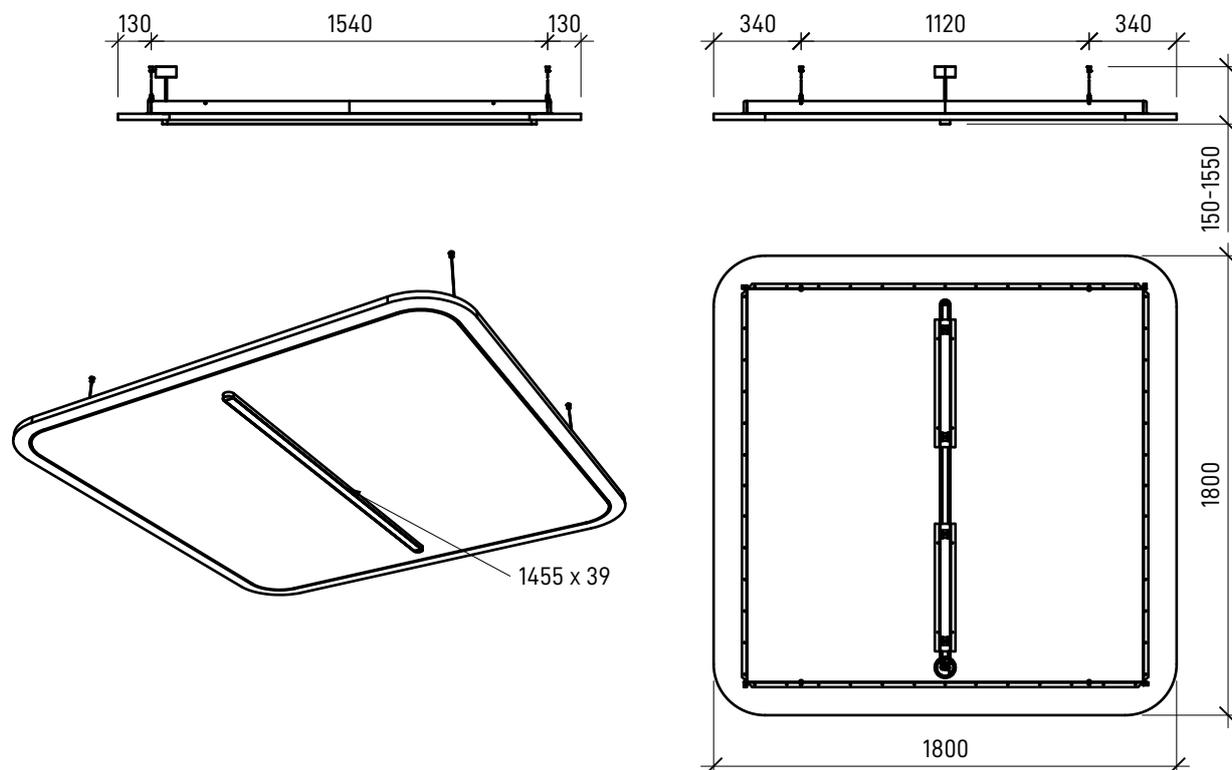


Bysson 723.24.21.000.00

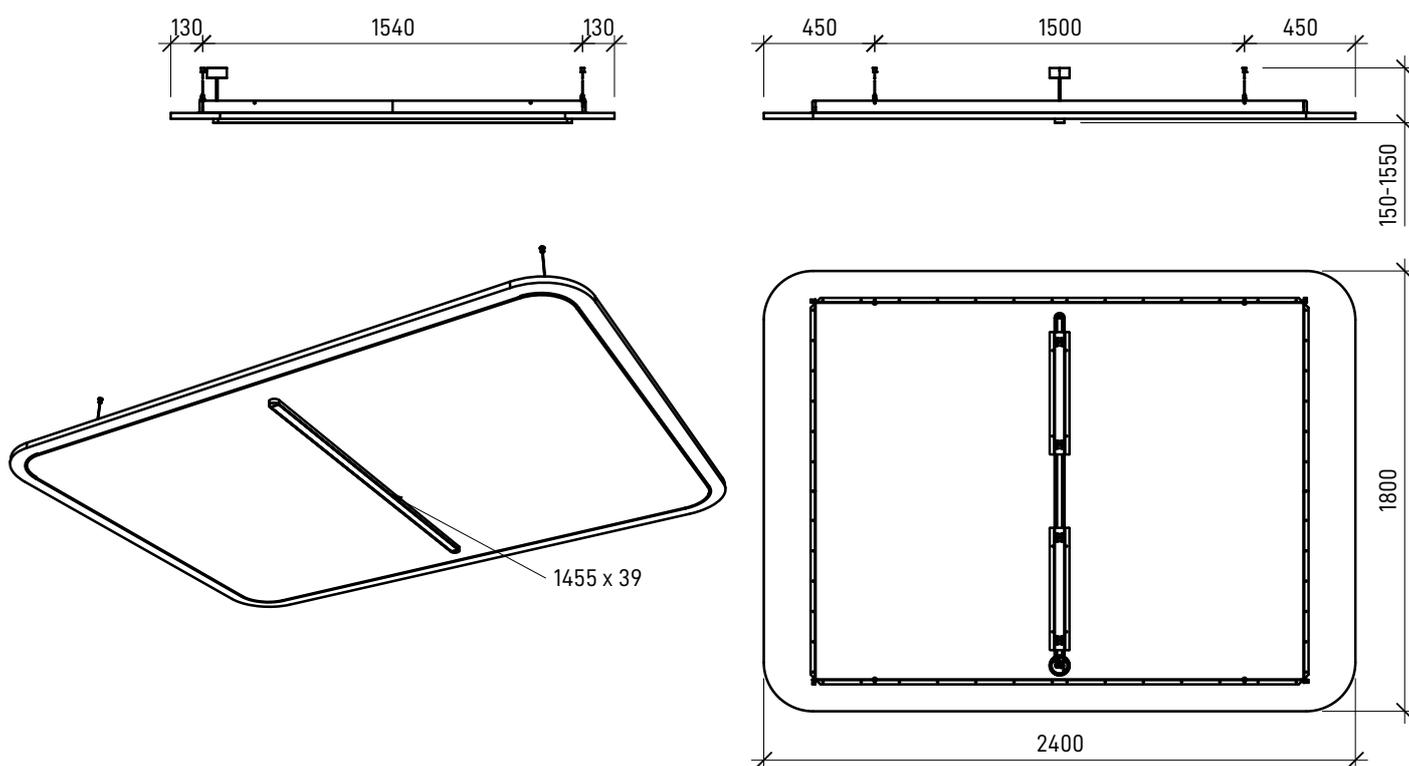


Dimensional Drawing

Bysso 723.24.22.000.00

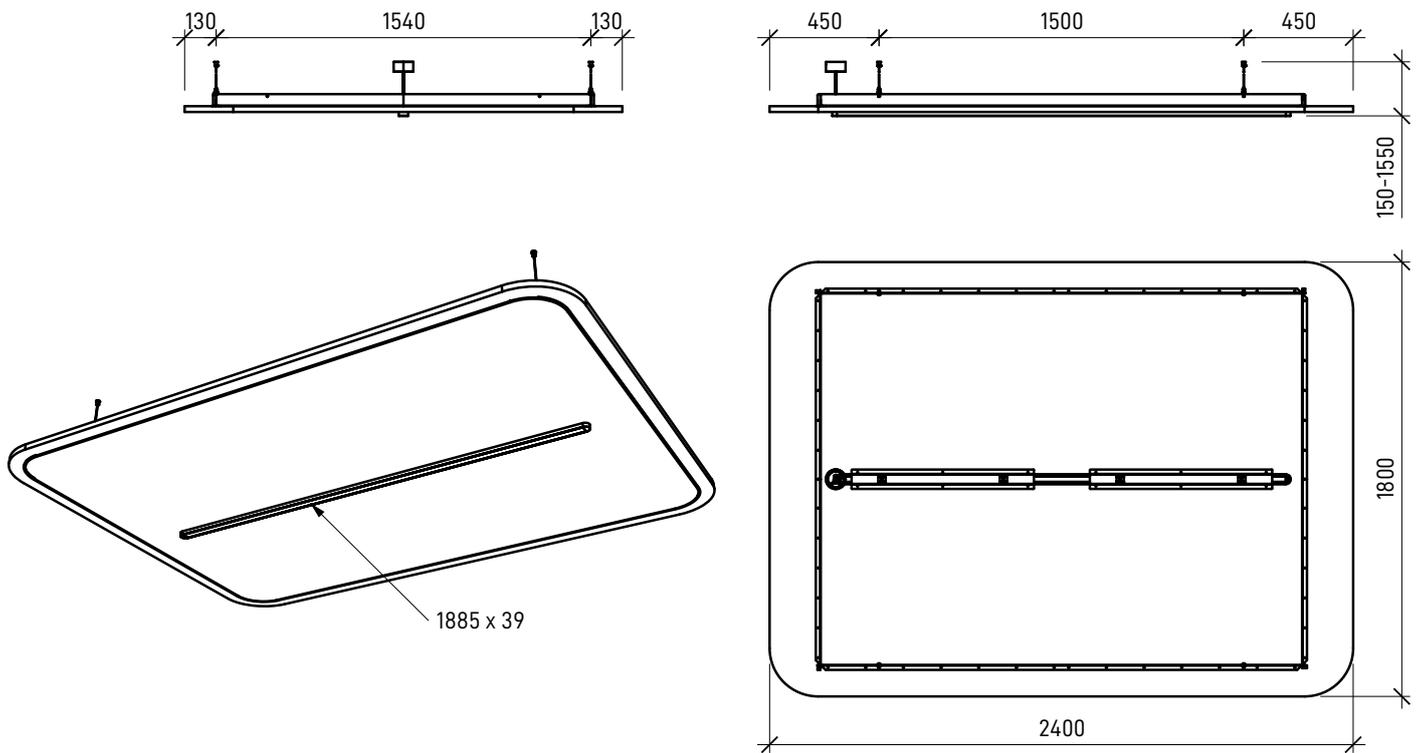


Step 1

The four frame elements are joined together as shown.

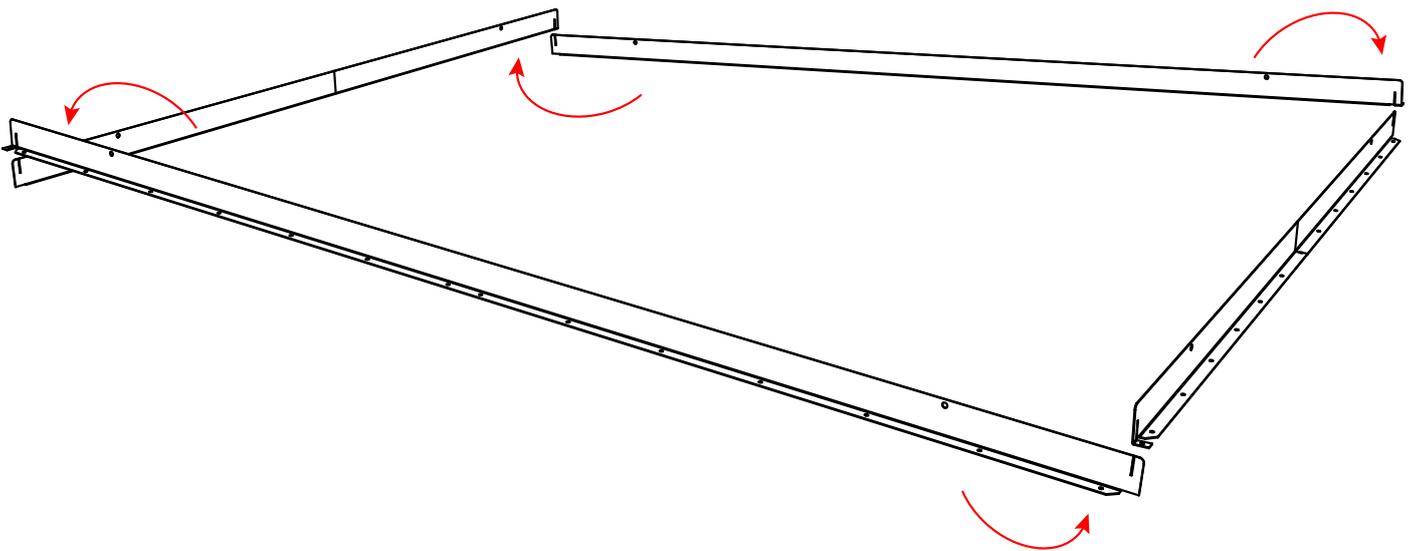


Step 2

Fasten the frame in the center with the included screws. Tighten the screws only slightly.

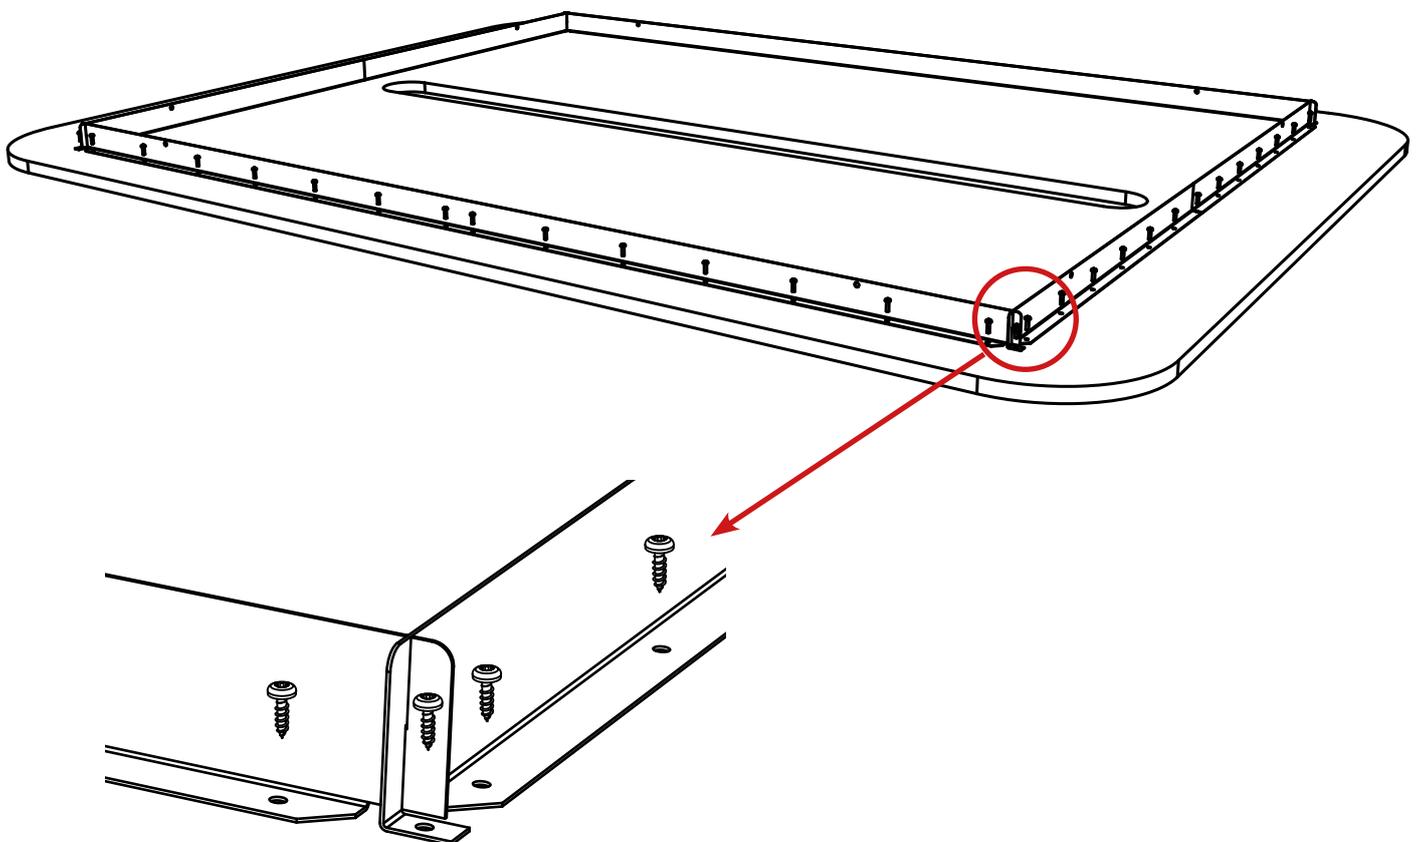

Step 3

Insert the lamp and screw it to the panel. Tighten the screws only slightly.

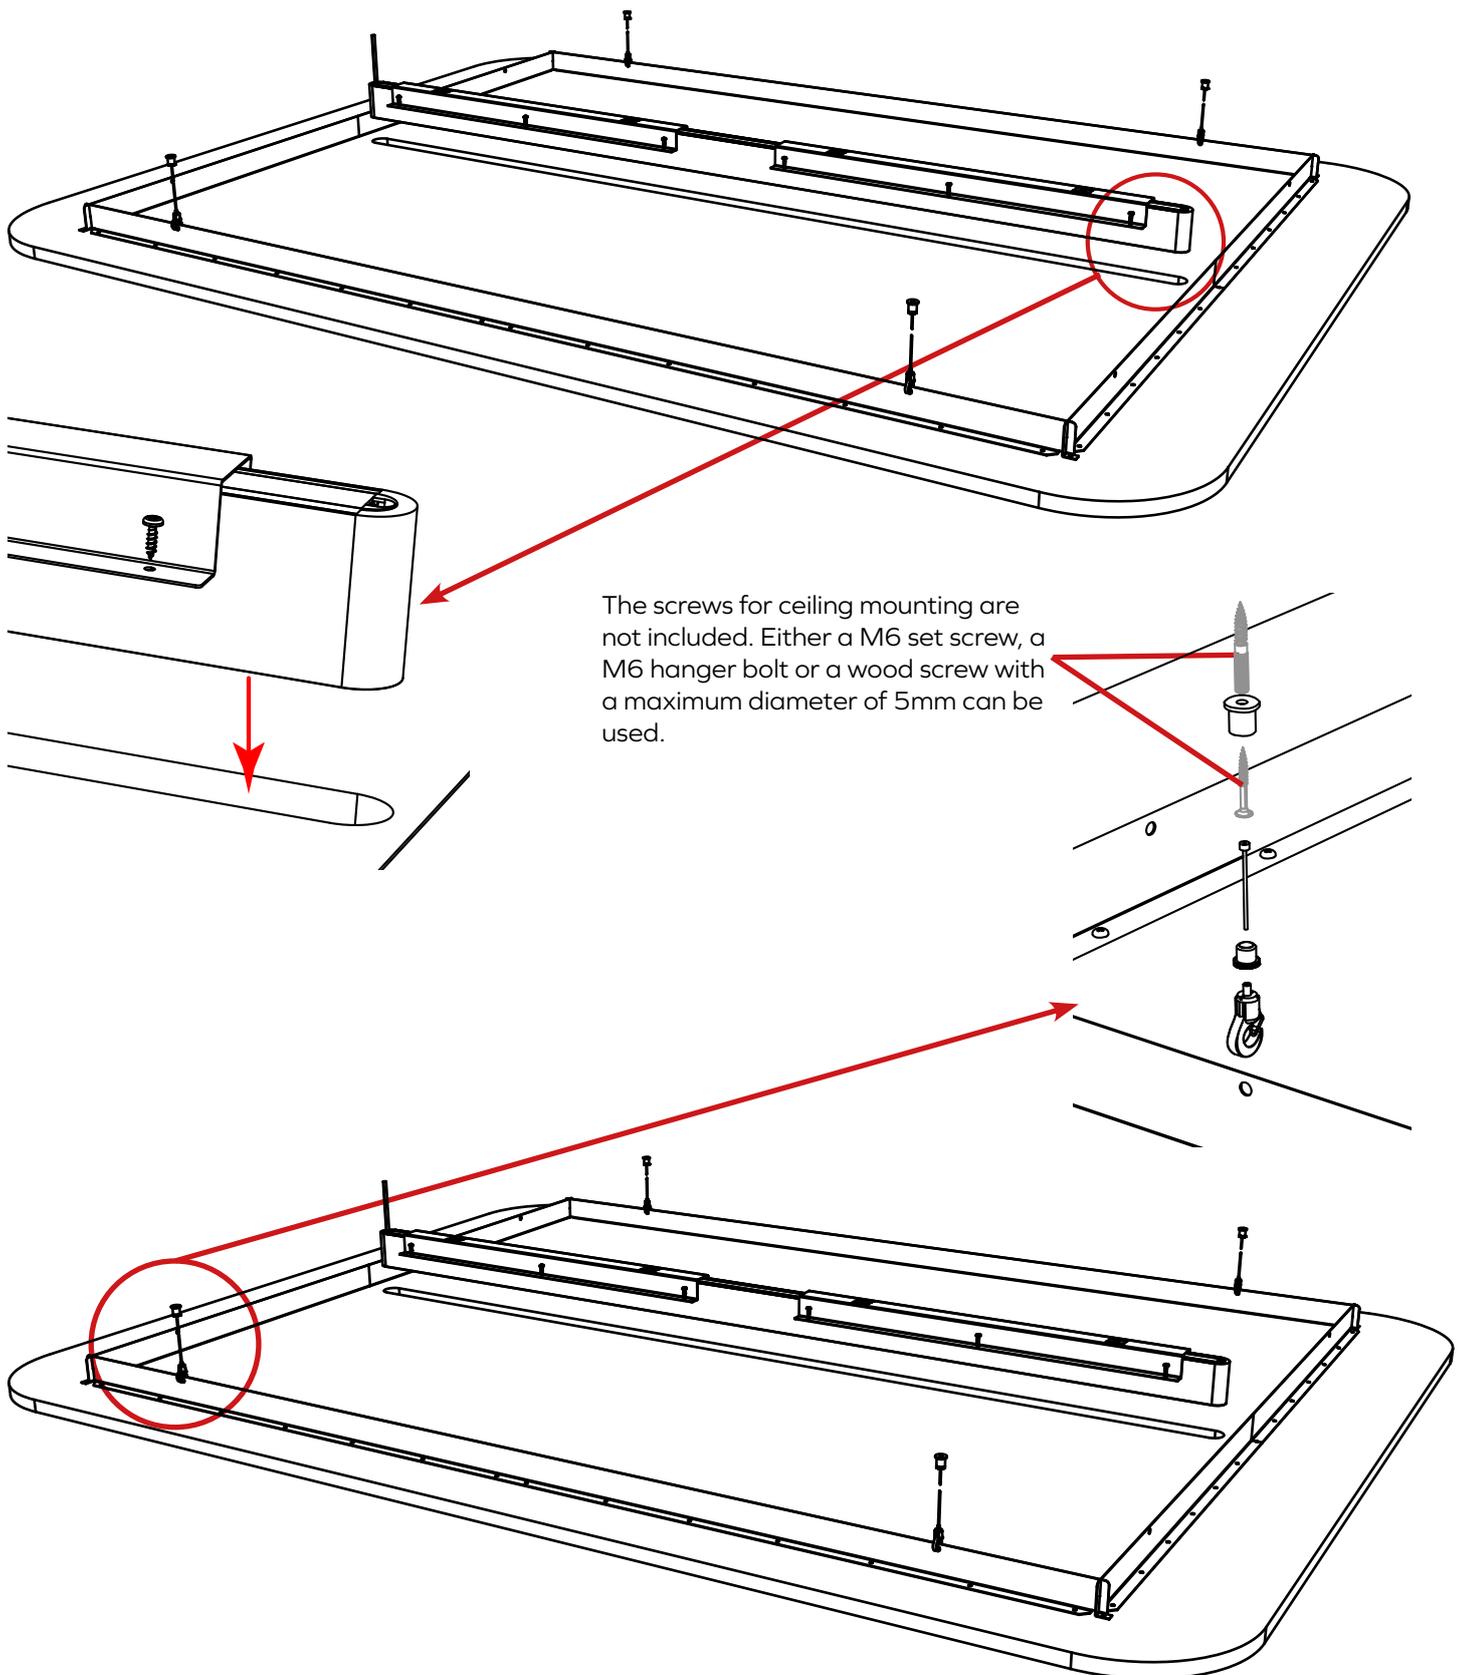


Step 4

Screw the hangers to the ceiling with suitable screws (not included). Fix the hook gripper to the wire rope. Hang the Bysson onto the wire ropes. The wire ropes can be shortened, but should protrude at least 30mm

Step 5

Assemble the canopy and hang the luminaire as shown below.

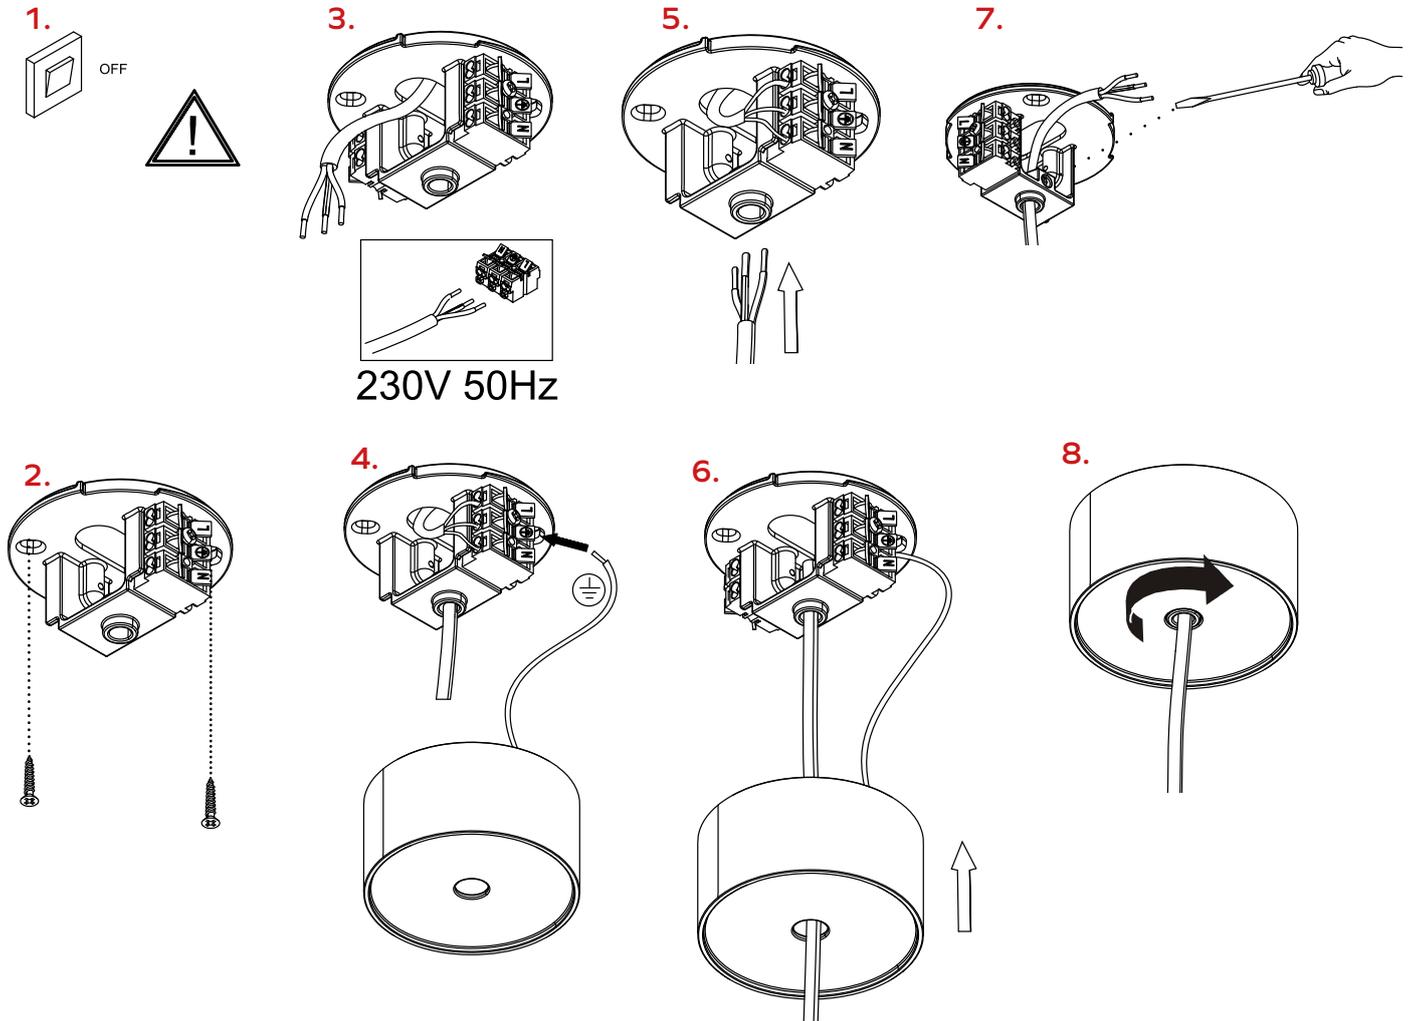

- Installation and commissioning only through authorised qualified personnel.
- Modifications or overhauling to luminaires or lighting components only with the written consent of PROLICHT.
- The light source contained in this luminaire shall only be replaced by the manufacturer or his agent or a similarly qualified person.
- Turn off power before working.
- Power connection only through the build-in resp. enclosed clamps.
- Luminaires and illuminants may not be disposed of as household waste. They have to be submitted to the default local recycling process.
- It is very important to use the gloves provided while mounting the light fixture.
- Luminaires of protection class 3 may only be supplied with converters with SELV output $\leq 60VDC$